SNTFX

HOW TO DO IT

HOW TO ASSEMBLE YOUR NEW BICYCLE?

www.santafixie.com/en

INSTALL THE FRONT WHEEL

PLACE THE FRONT WHEEL AND TIGHTEN THE NUTS. DO NOT OVERTIGHTEN.



INSTALL THE HANDLEBAR

BEFORE INSTALLING THE HANDLEBAR, YOU MUST MOUNT THE BRAKE LEVERS.

THEN REMOVE THE STEM CAP, PLACE THE HANDLEBAR AND TIGHTEN THE NUTS MAINTAINING THE SAME SPACE ON BOTH SIDES.







INSTALL THE BRAKES

PUT THE BRAKE CABLE HOUSING FROM THE LEVER TO THE BRAKE BRIDGE.

NOW PASS THE CABLE THROUGH THE HOUSING FROM THE LEVER TO THE BRAKE BRIDGE AND TIGHTEN WITH THE HEX KEY.

MAKE SURE THE BRAKE PADS ARE ALIGNED WITH THE RIM BRAKING SURFACE.





INSTALL THE SADDLE

INSERT THE SEATPOST INTO THE FRAME AT THE DESIRED HEIGHT AND TIGHTEN WITH THE PROVIDED HEX KEY.



INSTALL THE PEDALS

FOLLOW THE INSTRUCTIONS IN THE ATTACHED BROCHURE FOR THE CORRECT PLACEMENT OF THE PEDALS.

ADD GREASE (OR ANY LUBRICANT) TO THE THREAD.

THREAD THE **R** PEDAL ON THE RIGHT CRANK AND **L** ON THE LEFT.



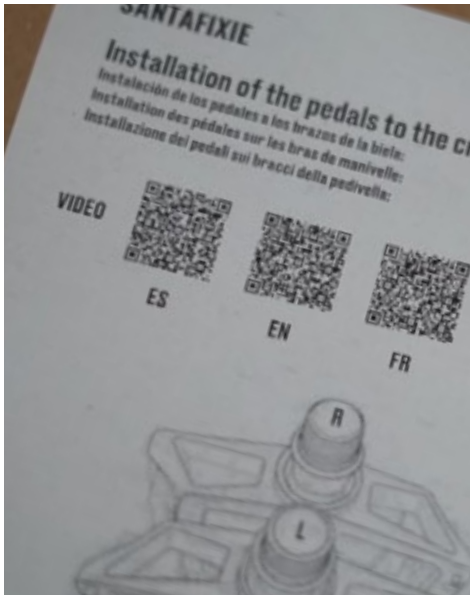





INFLATE THE TIRES

THE RECOMMENDED INFLATION PRESSURE APPEARS ON THE TIRE ITSELF.



LAST ADJUSTMENTS

PLACE THE BRAKE CABLE HEADS, ADJUST THE HANDLEBAR AND STEM WELL, AND SECURE THE REAR BRAKE CABLE WITH THE VELCRO.

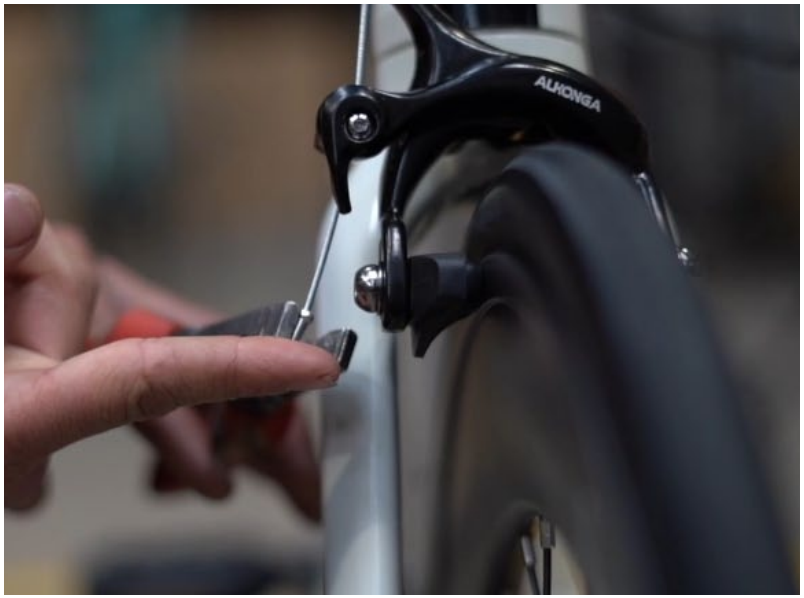







Watch the assembly video for more information

https://www.youtube.com/watch?v=PdQZS5JHgDM